



CONNECTION

CONTROL VALVE

- NOTE
1. WHERE PIPE SIZE IS 2 1/2 " OR SMALLER, PROVIDE BALL VALVE IN LIEU OF BUTTERFLY VALVE.
 2. PROVIDE THERMOMETERS AND PRESSURE GAUGES, PER SPECS.
 3. INSTALL UNIONS IN PIPE LOCATION OUT OF WAY TO PULL COIL OUT.
 4. PROVIDE BALANCE METER IN THE SUPPLY PIPE FOR AHU COIL WITH 50 GPM OR MORE.
 5. PROVIDE BALL VALVE DRAIN VALVE AND DRAIN LINE TO FLOOR DRAIN.